

伟焕机械安装步骤演示

伟焕机械储纬器安装与设置演示



开箱拿出所有配件
open the box and take out parts

伟焕机械安装步骤演示




扁线箭头和圆点朝上，卡入卡槽，装入压块，拧紧螺丝

the arrow and circle on upper side, match to the position, press the block and fast the screws



包箍装入下方螺丝孔


connect the hoop on button side

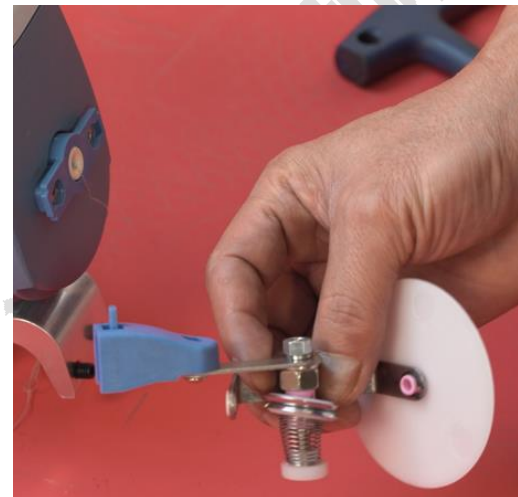


伟焕机械安装步骤演示



过线器卡入后方卡槽
connect the cable of back side of device

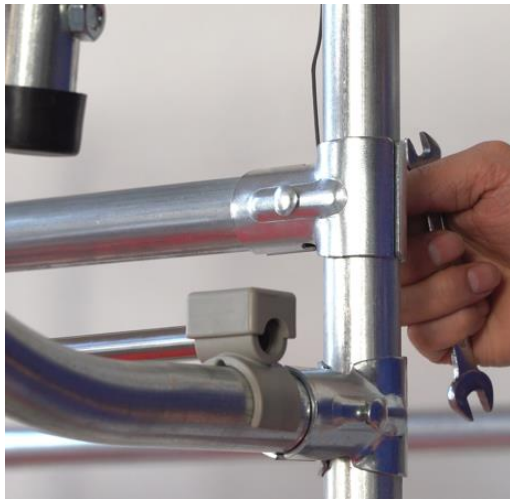

线架加装一根钢管，储纬器一个装在中间，一个装在右侧
add a horizon pipe for creel, put one of IRO device on middle of creel and another is on right side

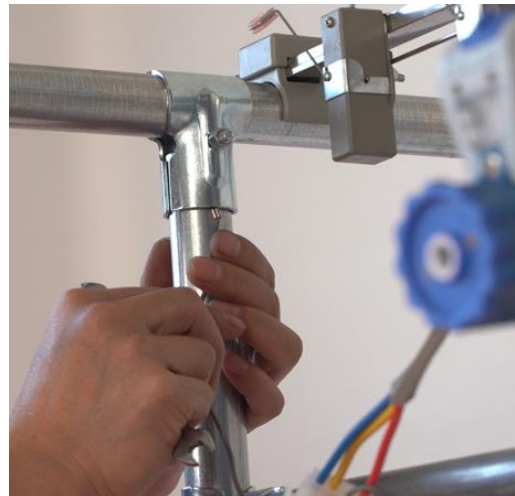


将储纬器的灰色报警线与线架连接
the grey cable of device connect to creel


伟焕机械安装步骤演示



将感应线插入机箱
put the cable to controller box

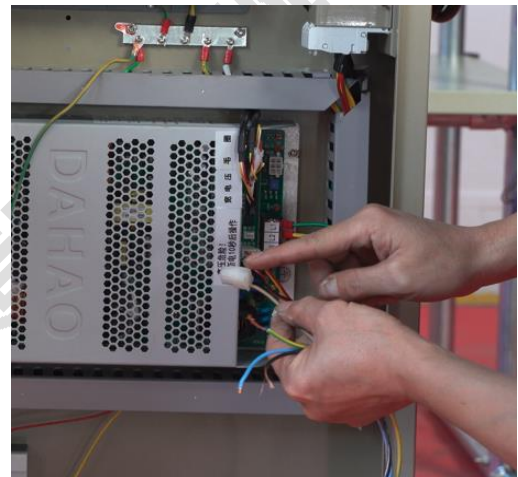


打开机箱，白色插头和控制盒右侧白色插孔连接
open the controller box, join two white connector(KDF) together in right side of controller box

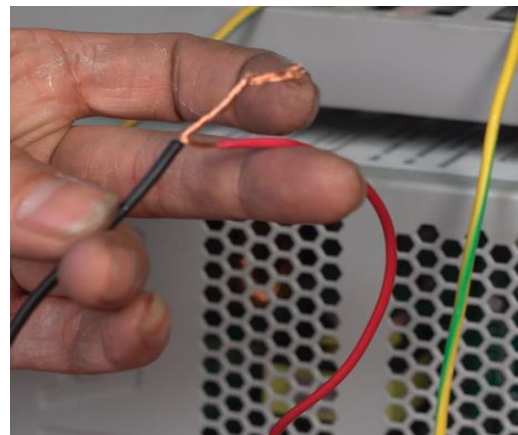

黄绿线和机箱地线连接，黑色感应线连接长电线
green+yellow cable connect to machine ground wire, extension the length of black cable with others wire

伟焕机械安装步骤演示

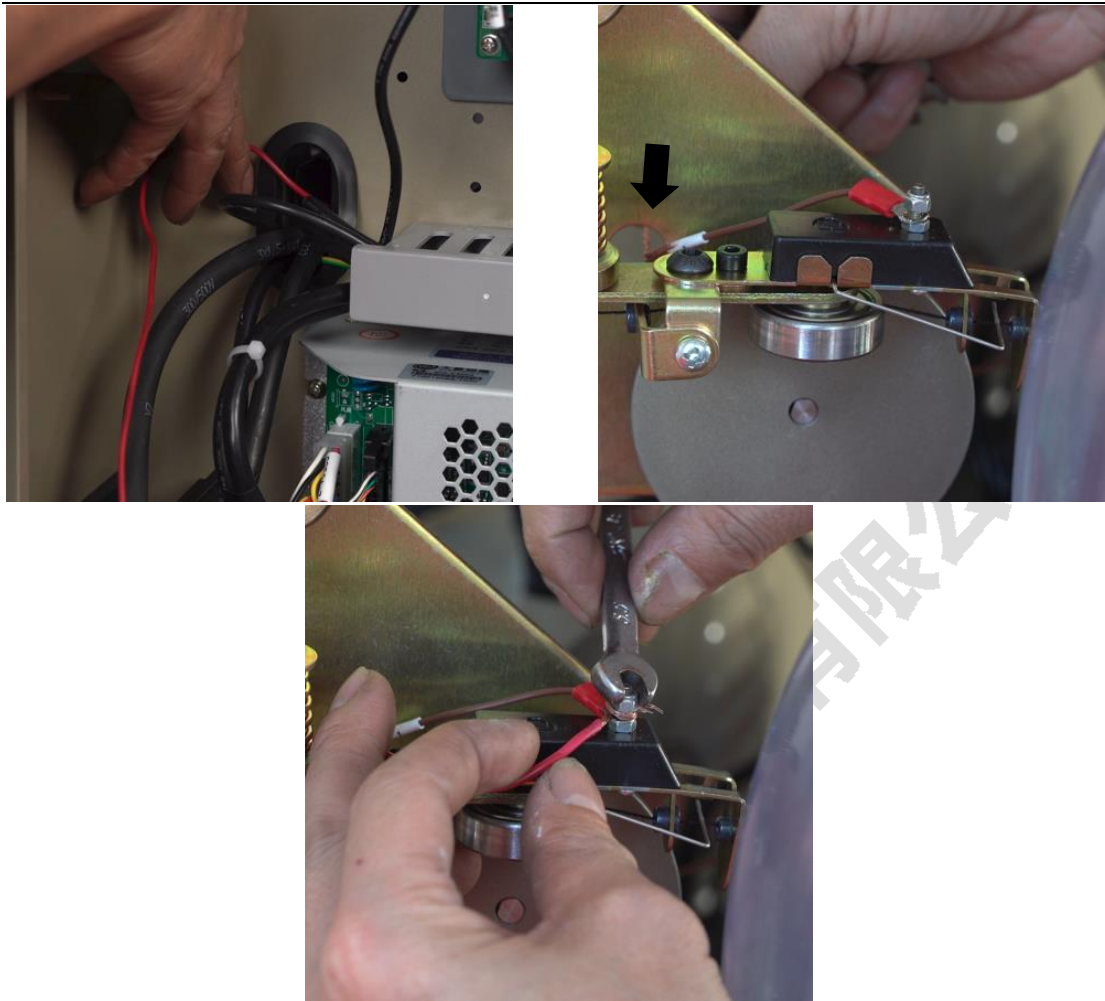

穿出机电箱，与橡筋报警线连接
put it out of controller box, connect it to elastic warning cable

伟焕机械红外线感应器安装演示