



伟焕机械安装步骤演示

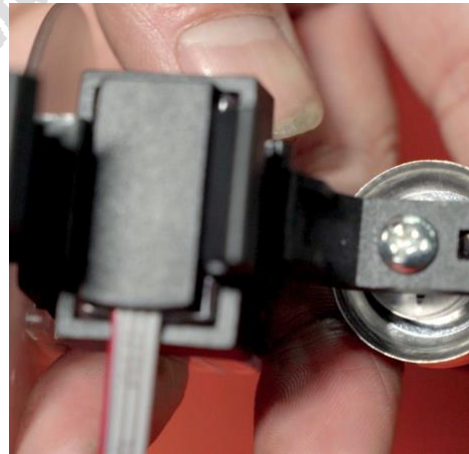

打开包装取出四种配件
open the box and check the parts as image


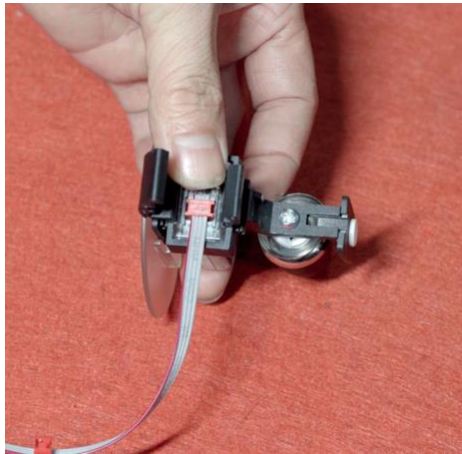


断纱器和扁线连接，扣上盖板
connect the sensor to flat cable, put on the cover

伟焕机械安装步骤演示




八个装置后空出三个再装两个
left 3 position between 8pcs and 2pcs

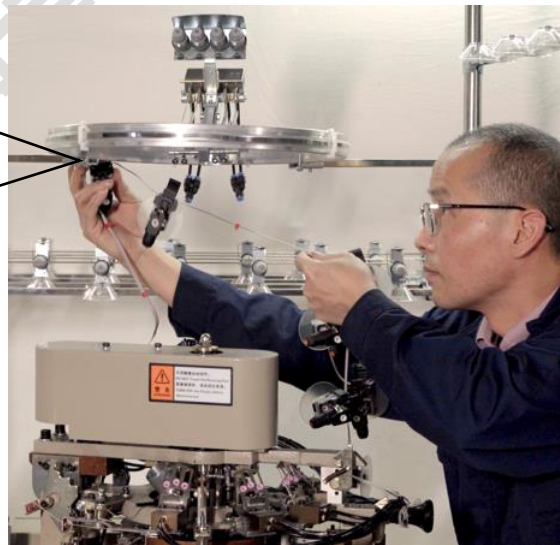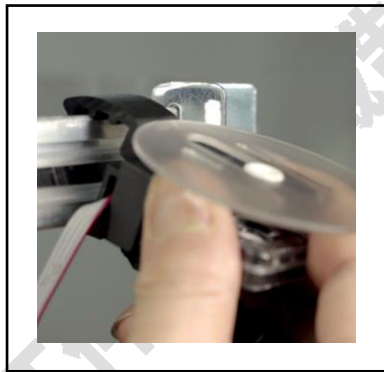


依次卡入圆盘，两个的在左边
connect them on the ring holder, 2pcs on left side



伟焕机械安装步骤演示

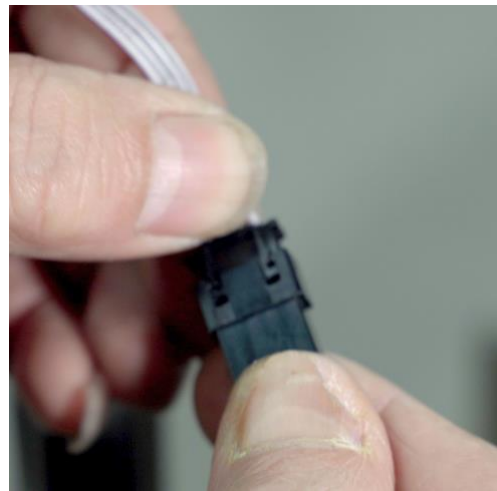

拿出黑色圆线，黑色头和黑色头连接
take out black cable, join the connector

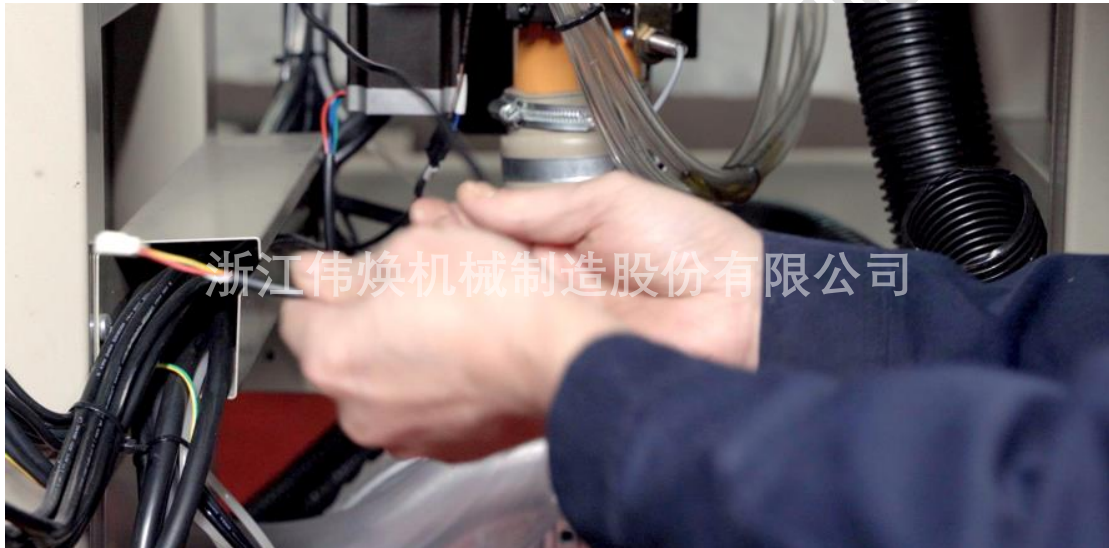

白色的一端插入机箱，
put in the controller box of cable with white connector

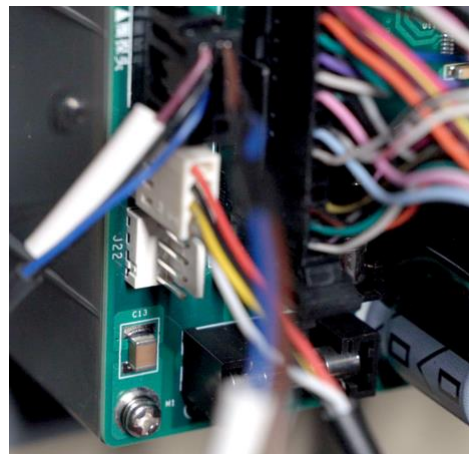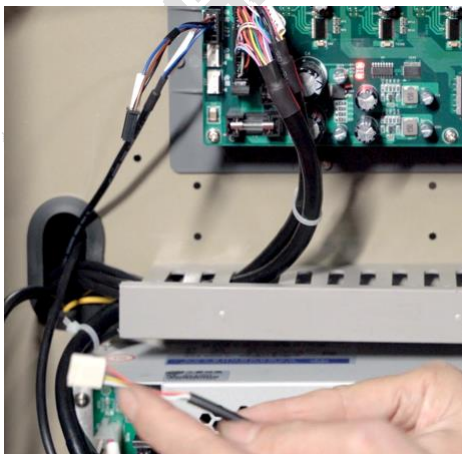

打开电脑箱，白色插头插入最上方的白色插孔
open the controller box, join the cable with white connectors

伟焕机械安装步骤演示



电眼设置

set up the sensor on controller





设置数与配备数一致

the set number should match the quantity of sensors





伟焕机械安装步骤演示

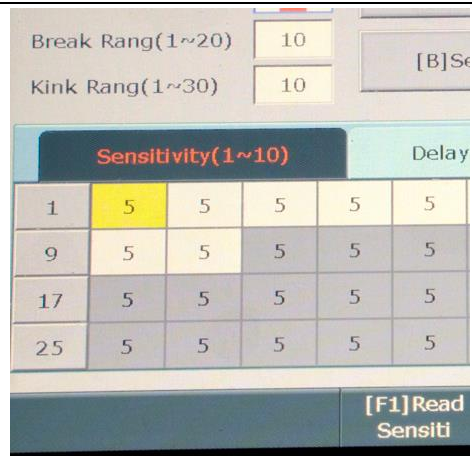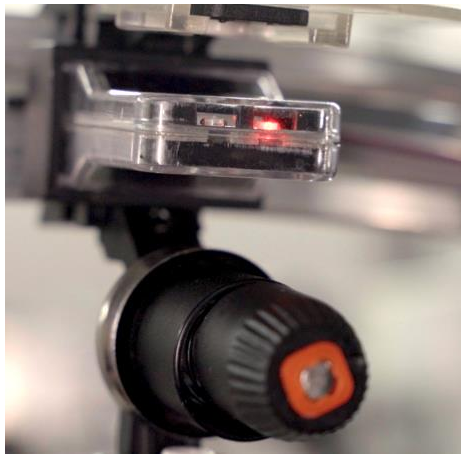

阻断红外感应，感应装置灯变红，数字界面亮起黄色

block the sensor light ,and make it from green turn to red, the sensor display shows yellow once finished setting

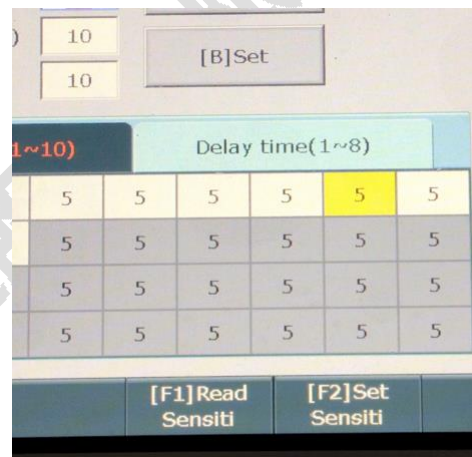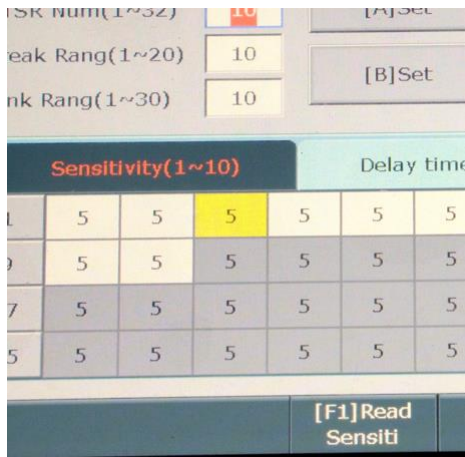


依次顺序操作

all same way we did for 10pcs

浙江伟焕机械制造有限公司

伟焕机械安装步骤演示

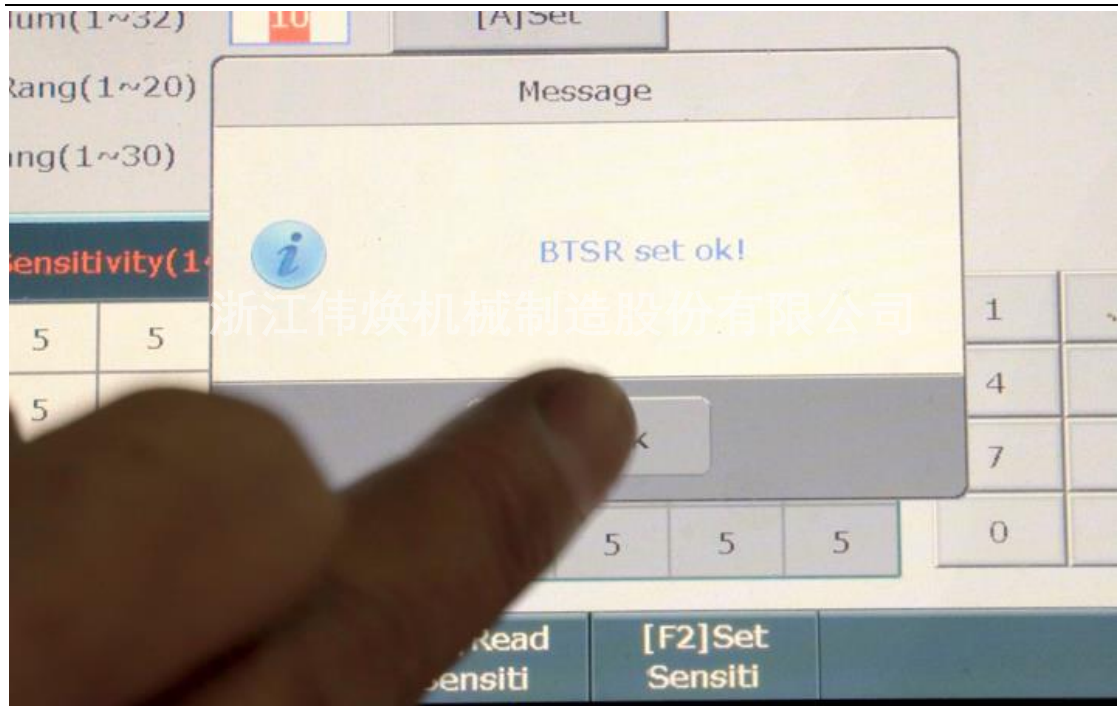

设置完成

sensor set up finish

浙江伟焕机械制造股份